



# XS WIRELESS 1

**Quick Guide** | Kurzanleitung | Guide rapide | Guida rapida | Guía de inicio rápido | Guia rápido | Beknopte handleiding | Krótka instrukcja obsługi | Snabbguide | Kort vejledning | Pikaohje | Γρήγορος οδηγός | Kısa Kılavuz | Краткая инструкция | 快速指南 | 快速使用指南 | クイックガイド | 요약 설명서

In the box	Vocal Sets		Instrument Sets		Lavaliere Set	Headmic Set
	XSW 1-825	XSW 1-835	XSW 1-C11	XSW 1-908	XSW 1-ME2	XSW 1-ME3
<b>XS WIRELESS 1</b> 	•	•	•	•	•	•
<b>EM-XSW 1</b> 	•	•	•	•	•	•
	•	•	•	•	•	•
	•	•	•	•	•	•
<b>MZQ 1</b> 	•	•	•	•	•	•
	•	•	•	•	•	•
<b>SK-XSW</b> 	•	•	•	•	•	•
<b>e 908T</b> 	•	•	•	•	•	•
<b>ME 2-2</b> 	•	•	•	•	•	•
<b>ME 3-II</b> 	•	•	•	•	•	•
<b>CI 1-N</b> 	•	•	•	•	•	•
<b>2 x AA LR6 1.5 V</b> 	•	•	•	•	•	•

### Battery

- Slide the battery cover open.
- Insert the battery with the correct polarity.
- Slide the battery cover closed.

### Low Battery

Bank 1 Ch. 1  
925.300 MHz

- ~ 10 h
- ~ 7 h
- ~ 3 h
- Low Batt

### Setup

**XLR-3** or **6.3 mm**

**Line Mic**

**EU US UK AU CN KOR**

**ME 2-2**, **e 908T**, **ME 3-II**, **CI 1-N**

### On/off

**1s on 3s off**

**OR**

**OR**

### Display

**EM-XSW 1**

**Bank 1...8** **Channel 0...9**

**Sensivity** **Sync** **Low battery**

### Volume

**0...9**

**0 1 2 3 4 5 6 7 8 9**

**Set / Scan**

### Mute

**Audio on**

**Audio off**

Sennheiser electronic GmbH & Co. KG

### Change frequency

**Automatically/Scan**

**Manually**

### Sync

Bank Ch. 1 1  
925.300

Bank Ch. 2 3  
929.100

### Sensitivity

### Multichannel

Bank 1...8  
Ch. 0...9

max. 10 ch.

Bank	CH.	Bank	CH.	Bank	CH.	Bank	CH.	
23		24		25		26		✓
11		12		13		18		✓
23		13		47		89		✗
23		23		23		23		✗

### ME 2-2

### ME 3-II

### Min. distance

### SKM

### Guitar pickup

### Squelch

